


1022

PORTATA MASSIMA
CARRYING CAPACITY

150kg

PIASTRA GIREVOLE 360° SU SFERE
360° BALL BEARING SWIVEL PLATE

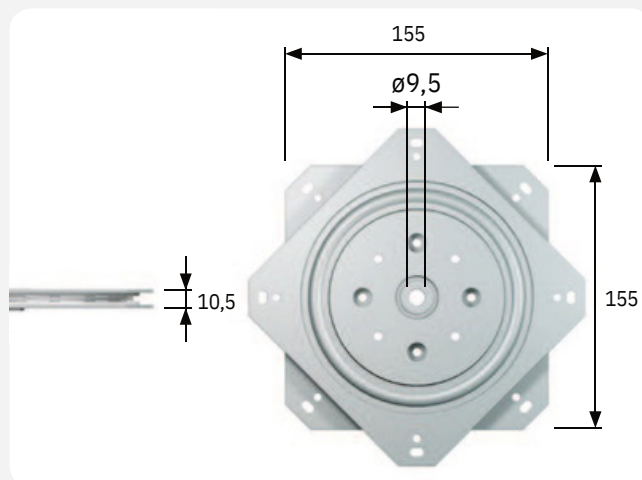

Codice / Code **01022/000/00/0000/00**


ESEMPI DI APPLICAZIONE / EXAMPLES OF APPLICATION



ISTRUZIONI DI FISSAGGIO / ASSEMBLY INSTRUCTIONS



- A** Fissare la piastra rotante nella parte inferiore del piano superiore. Praticare un foro da 18 mm sul piano superiore (vedi immagine 2). Appoggiare il piano superiore su quello inferiore con la piastra rotante a contatto del piano inferiore.
- E** i fori per le viti sulla parte inferiore della piastra rotante. Fissare la piastra girevole al piano inferiore.

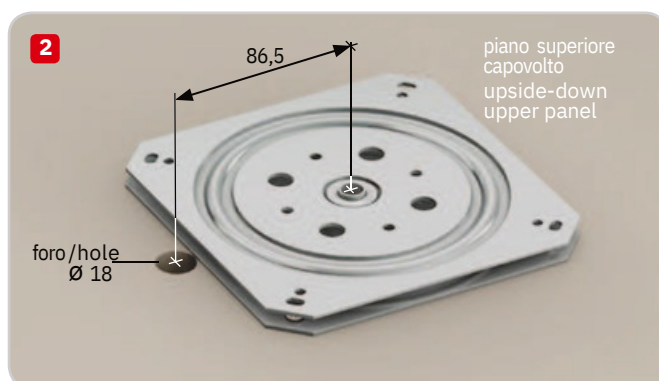

- A** Fix the rotating plate underside the upper panel.
- B** Drill a 18 mm hole in the upper panel as per the picture 2.
- C** Place the upper panel on the lower panel with the rotating plate in contact with the lower panel.
- D** Rotate the upper panel to make the 18 mm hole correspond with the screw holes in the lower part of the rotating plate.
- E** Fix the rotating plate to the lower panel using a screwdriver through the hole in the upper panel.