


► Il finto ribattino viene fissato sulle recinzioni, inferriate e cancelli tramite il riempimento del foro con saldatura.
Viene prodotto in due versioni: Art. FR pieno - Art. FRS svasato.

► *The fake rivet is fixed on fences, railings, and gates by filling the hole with welding.*
It is produced in two versions: Art. FR full - Art. FRS flared.


► *Le faux rivet est fixé sur les clôtures, les grilles de défense et les portails en bouchant le trou par soudage.*
Il est produit en deux versions: Art FR complète - Art FRS évasées.





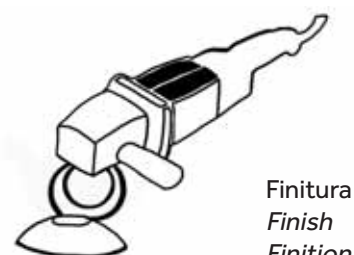

Saldatura
Welding
Soudage

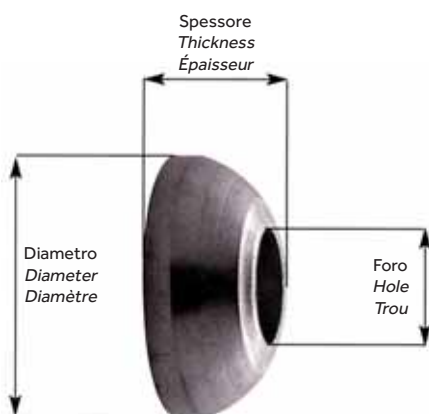

Finitura
Finish
Finition



	Codice Code Code	Ø Diametro Ø Diameter Ø Diamètre	Spessore Thickness Épaisseur	Foro Hole Trou	
	Art. FR01	13 mm	6 mm	6/7 mm	1000 pz.
	Art. FR02	16 mm	6 mm	8 mm	1000 pz.
	Art. FR03	18 mm	6 mm	8 mm	1000 pz.
	Art. FR04	20 mm	7 mm	8 mm	1000 pz.

	Codice Code Code	Ø Diametro Ø Diameter Ø Diamètre	Spessore Thickness Épaisseur	Foro Hole Trou	
	Art. FRS01	13 mm	6 mm	6/7 mm	1000 pz.
	Art. FRS02	16 mm	6 mm	8 mm	1000 pz.
	Art. FRS03	18 mm	6 mm	8 mm	1000 pz.
	Art. FRS04	20 mm	7 mm	8 mm	1000 pz.

► Un esempio di finto ribattino fissato su una recinzione

► *An example of a fake rivet fixed on a fence*

► *Un exemple de faux rivet fixé sur une clôture*

