



Esempio di applicazione delle dime per foratura e montaggio cardini

1. 002039120 dima \varnothing 12 mm
2. Art. 1366 "T" hinge series 1000 \varnothing 12 mm
3. stub drill
4. tassello
5. Art. 1239/G screw-in hinge with removable acorn \varnothing 12 mm

ART. 2019 \varnothing 17

ART. 2039 \varnothing 17

ART. 2040 \varnothing 17

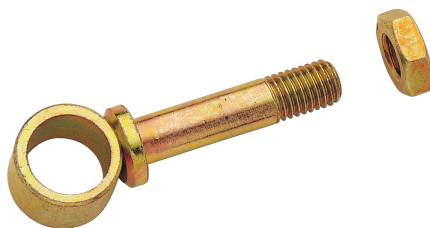
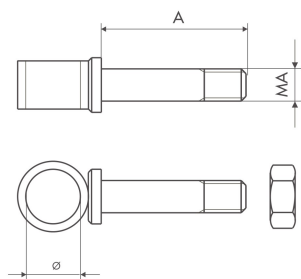


dime per foratura e montaggio cardini

drilling template with nut for pivot mounting
 schablone für die bohrung und die montage von angelzapfen
 gabarit pour perçage et montage des gonds

Articolo	A	\varnothing	MA	Pz./Conf.
2019	45	17	10	10
2039	48	17	12	10
2040	53	17	12	10

ART. 7039

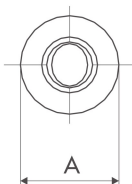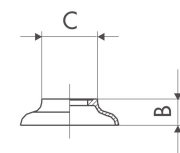

rondelle al poli-propilene per cardini ad avvitare

polypropylene washer for screw-in pivots
 unterlegscheibe aus polypropylen für
 einzumauernde angelzapfen
 rondelle au polypropylène pour gond à visser

Articolo	A	B	C	Pz./Conf.
7039	30	8	17	500