

## Ferrogliera a pavimento.

Figura 1

Applicazione di paletti e terminali asta in luce tra i profili.

Figura 2

Applicazione di paletti frontali.

## Gâche au sol.

Figure 1

Montage pour verrous et sorties de tringle en feuillure.

Figure 2

Montage pour verrous en applique.

## Floor keeper.

Figure 1

Inside clearance application of bolt and terminal rod.

Figure 2

Front bolt application.

## Cerradero empotrado.

Figura 1

Aplicación de pasadores y terminales entre la luz de los perfiles.

Figura 2

Aplicación de pasadores frontales.

Fig. 1

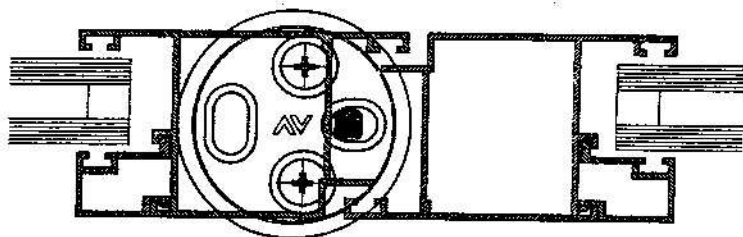


Fig. 2

