



Per il taglio delle aste lato cremonese, attenersi alle quote sotto indicate.  
For rod cutting (cremonese bolt side), follow indications below.

Pour le débit des tringles côté crémone, suivre les cotes indiquées ci-dessous.  
Para el corte de las pletinas lado cremona, seguir las cuotas indicadas abajo.


**1246.1/.3**

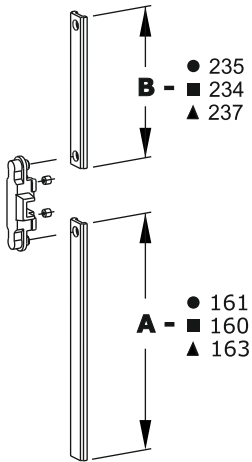


**1246.13/.14/.16/.17**

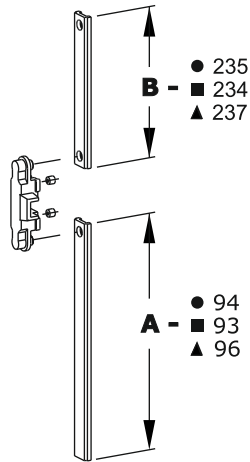


**1246.32/.33/.40**

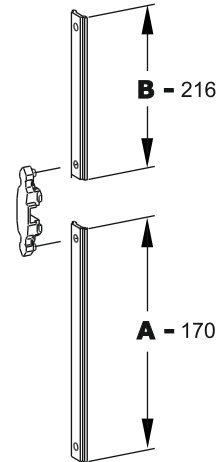


**1246.38/.39/.43**

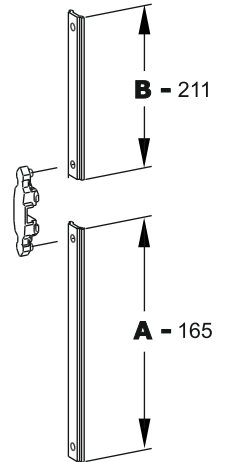


**1247.7/.8/.9/.10**  
**1247.37/.38/.39/.40**

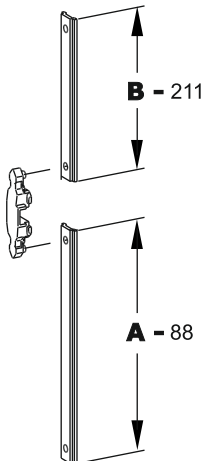


**3000.2/.3**

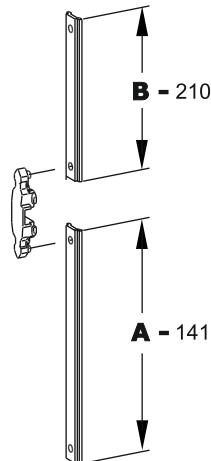


**3000.4/.5**

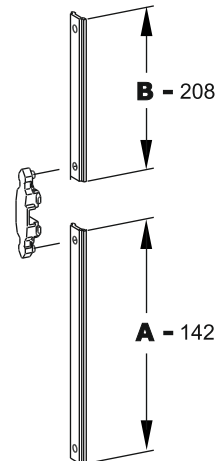

**3001/.1/.10/.11**

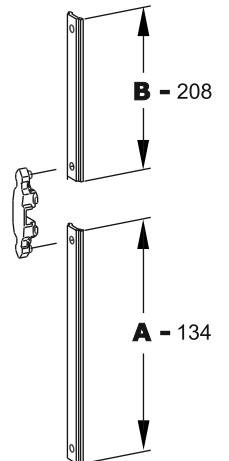

**3000.6/.7 - 3001.6/.7**  
**3100/.1 - 3101/.1**

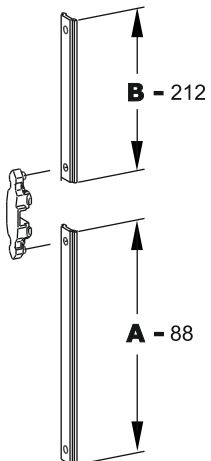

**3100.2/.3**

